



Инструкции по монтажу муфты RS


Монтаж

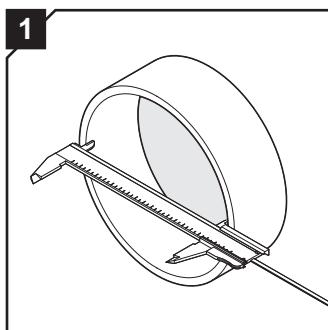


Просверлить отверстие или измерить диаметр существующего отверстия.

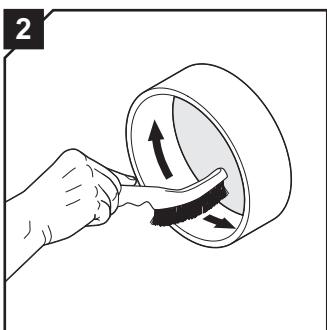


Очистить отверстие.

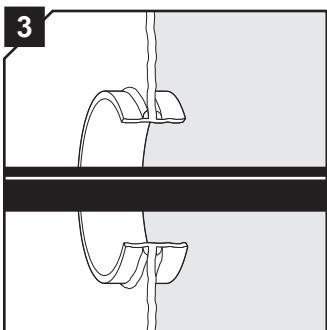


Кабель или труба должны проходить прямо и по центру гильзы.

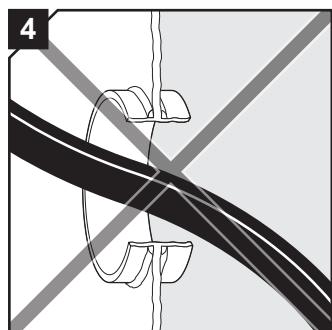


Неприемлемо.

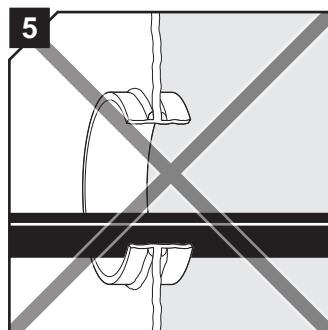


Неприемлемо.

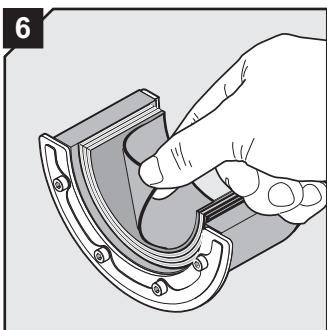


Подогнать муфту RS посредством удаления слоев резины с каждой половинки, до получения зазора, показанного на этапе 7. Количество слоев на половинках муфты не должно отличаться более чем на один слой.

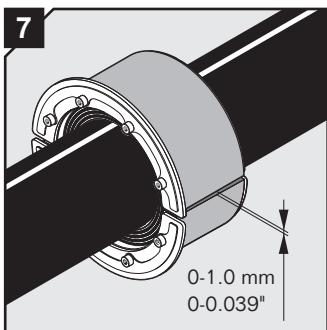


Обеспечить зазор между двумя половинами муфты в пределах от 0 мм до 1,0 мм, зажав между ними кабель или трубу.

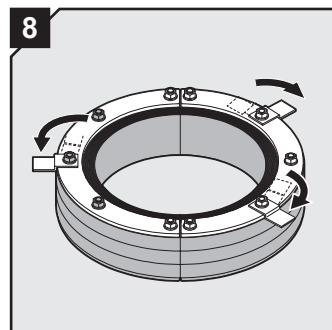


Развернуть стопорные выступы, если они предусмотрены (RS 225-644).

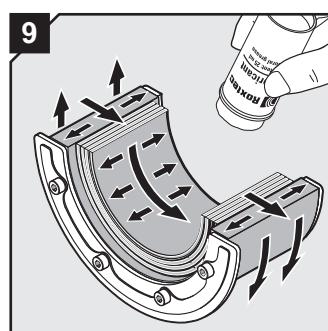


Нанести смазку Roxtec Lubricant на внутренние и внешние поверхности уплотнения.

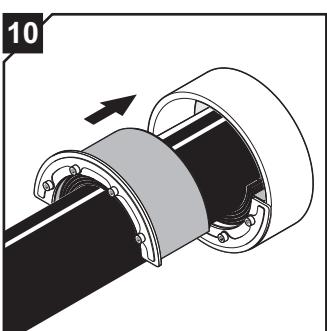


Вставить половины муфты в гильзу.

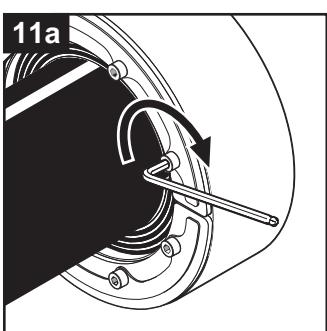


Постепенно в несколько приемов затягивать болты в перекрестном порядке до полной затяжки.

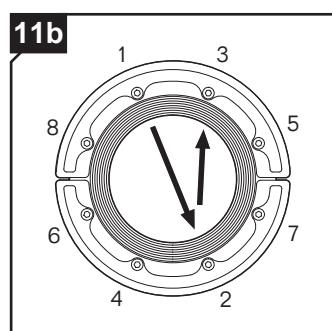


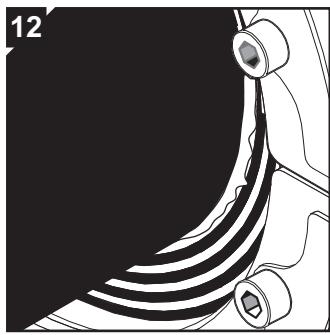

После затяжки должны быть видны излишки смазки, выдавленные наружу.

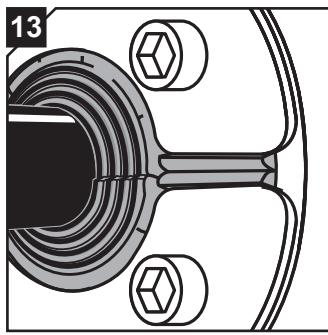


Резина возле передних накладок должна расширяться.

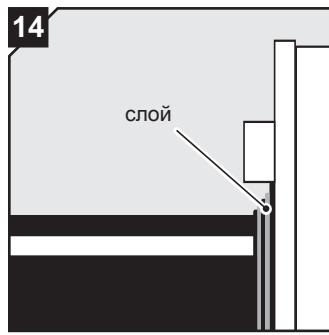


Слой резины при их наличии должны выступать наружу.


Демонтаж

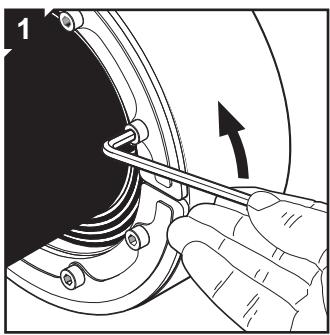


Разжать муфту, попеременно откручивая болты.

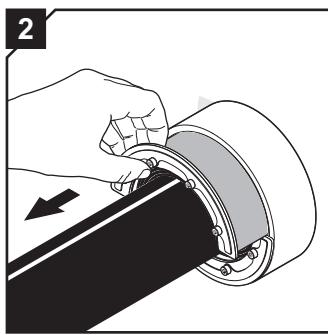

Извлечь муфту RS.

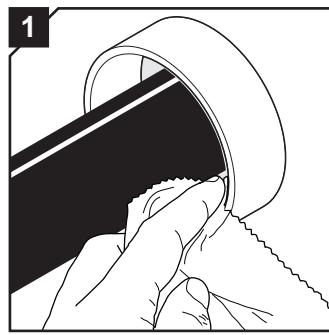

Очистить гильзу.




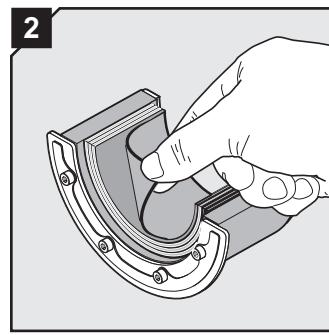


Продолжить монтаж с этапа 6.

Повторный монтаж

Данные продукта

Типоразмер: RS	Максимальный момент затяжки * (Н.м)	SW (мм)	Размеры отверстия Ø (мм) (A)	Диаметр кабелей/труб	Минимальный габарит по глубине (L)
25	1	2.5	25-26	0+3.6-12	39
31	1	2.5	31-32	0+4-17	40
43	4	4	43-45	0+4-23	78
50	4	4	50-52	0+8-30	78
68	4	4	68-70	0+26-48	78
75	4	4	75-77	0+24-54	78
100	4	4	100-102	0+48-70	78
125	7	5	125-127	0+66-98	78
150	7	5	150-152	93-119	79
175	7	5	175-177	119-145	80
200	7	5	200-203	138-170	80
225	17	10	225-228	151-181	68
250	17	10	250-253	176-206	69
300	17	13	300-303	206-236	71
350	17	13	350-353	244-286	71
400	17	13	400-403	294-336	71
450	35	17	450-453	344-386	71
500	35	17	500-503	394-436	74
550	35	17	550-553	444-486	74
600	35	17	600-603	494-536	74
644	35	17	644-647	538-580	74

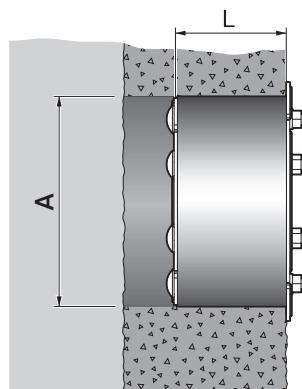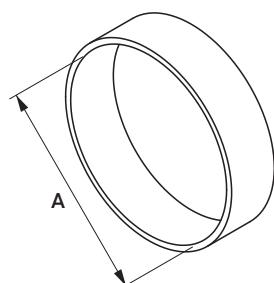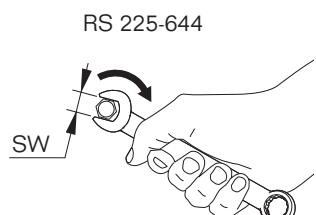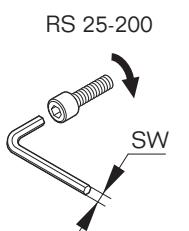

Примечания

- После монтажа не допускать нагрузок или давление на кабели и трубы в течение 24 часов.
- Кабели должны проходить через муфту без изгиба.
- Дополнительная информация к данной инструкции по монтажу представлена на сайте www.roxtec.com.

DISCLAIMER

The Roxtec cable entry sealing system ("the Roxtec system") is a modular-based system of sealing products consisting of different components. Each and every one of the components is necessary for the best performance of the Roxtec system. The Roxtec system has been certified to resist a number of different hazards. Any such certification, and the ability of the Roxtec system to resist such hazards, is dependent on all components that are installed as a part of the Roxtec system. Thus, the certification is not valid and does not apply unless all components installed as part of the Roxtec system are manufactured by or under license from Roxtec ("authorized manufacturer"). Roxtec gives no performance guarantee with respect to the Roxtec system, unless (i) all components installed as part of the Roxtec system are manufactured by an authorized manufacturer and (ii) the purchaser is in compliance with (a), and (b), below.
(a) During storage, the Roxtec system or part thereof, shall be kept indoors in its original packaging at room temperature.
(b) Installation shall be carried out in accordance with Roxtec installation instructions in effect from time to time.

The product information provided by Roxtec does not release the purchaser of the Roxtec system, or part thereof, from the obligation to independently determine the suitability of the products for the intended process, installation and/or use.
Roxtec gives no guarantee for the Roxtec system or any part thereof and assumes no liability for any loss or damage whatsoever, whether direct, indirect, consequential, loss of profit or otherwise, occurred or caused by the Roxtec systems or installations containing components not manufactured by an authorized manufacturer and/or occurred or caused by the use of the Roxtec system in a manner or for an application other than for which the Roxtec system was designed or intended.
Roxtec expressly excludes any implied warranties of merchantability and fitness for a particular purpose and all other express or implied representations and warranties provided by statute or common law. User determines suitability of the Roxtec system for intended use and assumes all risk and liability in connection therewith. In no event shall Roxtec be liable for indirect, consequential, punitive, special, exemplary or incidental damages or losses.*



Roxtec International AB
Box 540, 371 23 Karlskrona, SWEDEN
PHONE +46 455 36 67 00, FAX +46 455 820 12
EMAIL info@roxtec.com, www.roxtec.com